
 



 











## Getting Started





 

 


 
 
 

This section describes the remote control, how you turn on the TV, cable settop, and VCR, and how you display and use the channel banner and Program Guide.

### About the remote control

The picture on the previous page shows the remote control. The table below lists the remote control buttons with a description of each button. Your remote may vary slightly, but basic functionality is the same.

<b>Press this button</b>	<b>To</b>	<b>Press this button</b>	<b>To</b>
	Turn VCR on or off		Change the channel – press “+” to channel up, press “-” to channel down
	Turn TV on or off		Show or hide the Program Guide
	Turn cable settop on or off		Exit the current Cox On-screen Guide item (channel banner, Program Guide, menu, help)
	Turn the volume off or on		Move the highlight to the left
	Adjust the volume - press ‘+’ to increase the volume level; press ‘-’ to decrease the volume level		Move the highlight up
	Return to the channel you last tuned to		Move the highlight to the right
	Tune to the next favorite channel or highlight the next favorite channel in the Program Guide		Move the highlight down
			Select the highlighted item

## Getting Started

<b>Press this button</b>	<b>To</b>	<b>Press this button</b>	<b>To</b>
	Show or hide the channel banner; in the Program Guide, show more information about programs; in the Settings menu, show help		Play VCR tape if you press the VCR button first; play the PPV movie if you pressed the PPV button first
	Scroll several lines in the Program Guide		Fast forward VCR tape if you press the VCR button first; fast forward the PPV movie if you pressed the PPV button first
	Bypass the cable settop to tune directly on the TV		Record current program on VCR tape if you press the VCR button first; record the PPV movie if you pressed the PPV button first
	View Program Guide information for the previous day if you press the CABLE button first		Stop current program VCR tape if you press the VCR button first; stop the PPV movie if you pressed the PPV button first
	View Program Guide information one day ahead if you press the CABLE button first		Pause VCR tape if you press the VCR button first; pause the PPV if you pressed the PPV button first
	Activate VCR’s TV/VCR switch		Rewind VCR tape if you press the VCR button first; rewind the PPV movie if you pressed the PPV button first
	Make the PLAY, PAUSE, STOP, FFWD, REW, and REC buttons work with a PPV movie		