

Guide To Your Remote Control

Use **SETUP** for all programming sequences.

Press **AUX**, **VCR**, **TV**, or **CABLE** once to select a home entertainment device to control. Each key has an embedded LED (red light) that blinks upon selection and indicates that the remote control is working and is sending signals.

Use **INFO** to display the current channel and program information.

Use the **Cursor** keys to move the cursor in the program guide and menu screens and to navigate within the interactive service. Use **SELECT** to choose options, PPV events, and to tune programs from the program guide.

Use **GUIDE** to display the program guide.

Use **A**, **B**, or **C** to scroll through them – title in guide.
A - Time, B - Theme, C - Title

Use **SETTINGS** to access additional cable features in user menu (see your cable converter's manual).

Use **VOL+** (or **VOL-**) to raise (or lower) the sound volume.

Press **LAST** once to recall the last channel.


Use **FAV** to cycle through your favorite channels stored in your cable converter.

Press **MUTE** once to turn the sound off or on.

Use the keypad (**0-9**) to directly select channels (e.g., **09** or **31**).

Use **INPUT** to control the bypass select feature. (Watch one program and record another.)



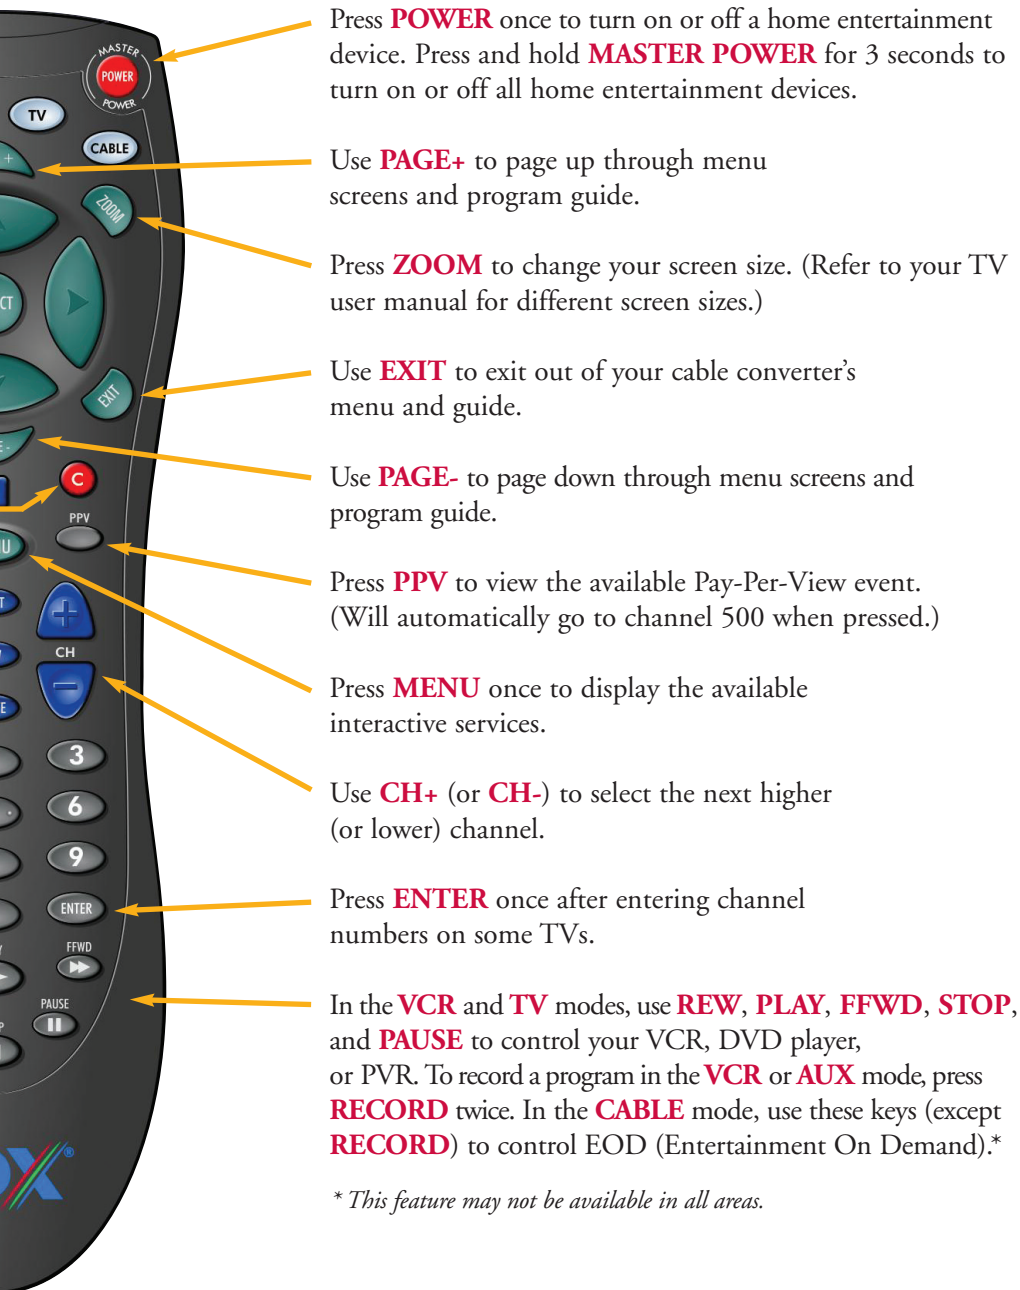

Press **POWER** once to turn on or off a home entertainment device. Press and hold **MASTER POWER** for 3 seconds to turn on or off all home entertainment devices.

Use **PAGE+** to page up through menu screens and program guide.

Press **ZOOM** to change your screen size. (Refer to your TV user manual for different screen sizes.)

Use **EXIT** to exit out of your cable converter's menu and guide.

Use **PAGE-** to page down through menu screens and program guide.

Press **PPV** to view the available Pay-Per-View event. (Will automatically go to channel 500 when pressed.)

Press **MENU** once to display the available interactive services.

Use **CH+** (or **CH-**) to select the next higher (or lower) channel.

Press **ENTER** once after entering channel numbers on some TVs.

In the **VCR** and **TV** modes, use **REW**, **PLAY**, **FFWD**, **STOP**, and **PAUSE** to control your VCR, DVD player, or PVR. To record a program in the **VCR** or **AUX** mode, press **RECORD** twice. In the **CABLE** mode, use these keys (except **RECORD**) to control EOD (Entertainment On Demand).*

** This feature may not be available in all areas.*