

# COX HOMELIFE DEVICES BATTERY REPLACEMENT INSTRUCTIONS

## MOTION SENSOR



**Bosch Brand**



**AA Battery (6)**

- 1** To open the sensor, unlock the case by inserting a small flathead screwdriver into the locking notch located at the bottom of the detector.
- 2** Hold the base and slide the unit body down to remove it from the base.
- 3** Remove the old batteries and dispose of them properly.
- 4** Insert six new AA batteries.
- 5** To close the sensor, slide the detector back onto the base and turn the locking notch back into the locked position.

**COX** Homelife<sup>SM</sup>

Protect. Monitor. Control.